 
 


Energizer®

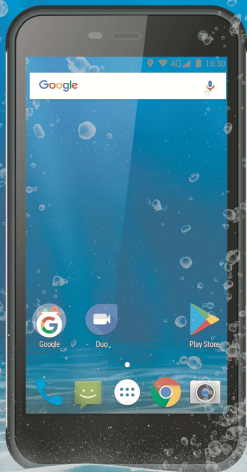

HARDCASE H500S

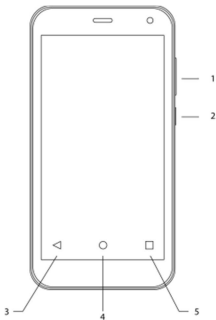 


1.1




1.2

2.1

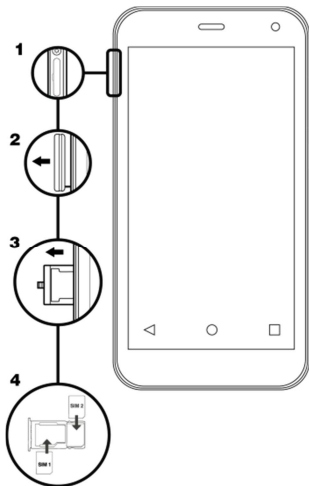

2.2

 2.3

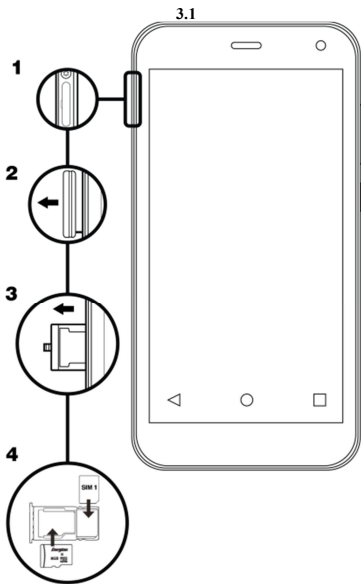

INTRODUCING YOUR MOBILE PHONE

Learn about your mobile phone's keys, display and icons.

Keys

From the front view of your phone you will observe the following elements:

(See 1.1 – Page 1)

The following table offers you a quick description about the phone's keys:

Item	Key	Function
1	Power button	Allow you to turn on/off the device and to lock the screen.
2	Volume	Allow you to adjust the volume of ringing and notifications. Also allows you to adjust the volume of multimedia content playback.
3	Back	Allow you to return to the previous menu or screen. Also allow you to close some applications.
4	Home	It takes you directly to the home screen, leaving any application open.
5	Menu	Allow you to access to the functions menu of the application or screen you are.













Screen

The screen of your mobile phone is designed as follows:

(See 1.2 – Page 1)

Icons

Learn about the icons that are displayed on the top of the screen, indicating the status of the phone:

	Signal strength		Wi-Fi connection
	Bluetooth On		USB connected
	Battery meter		New message
	Vibration profile		New email
	Roaming indicator		Alarm active
	Headset connected		Silent profile